



Zdjęcie 1

1. Remove M4 screws from both sides



Zdjęcie 2

2. Try to make maximum backlash according to picture 2 (attention : with remote head backlash increase)



Zdjęcie 3

3. Turn the excentric bras bushing on the left and right side one step, screw in the M4 screws
4. Check backlash
5. Repeat this action until you reach minimal backlash



Zdjęcie 4



6. On this example hole no. 5 shows little backlash

Zdjęcie 5



Zdjęcie 6




7. To precise adjustment use one of three holes on picture 7. Adjust from both sides of the leveling head identical (only one hole mach)

Zdjęcie 7



8. screw in the blocking screws

Zdjęcie 8

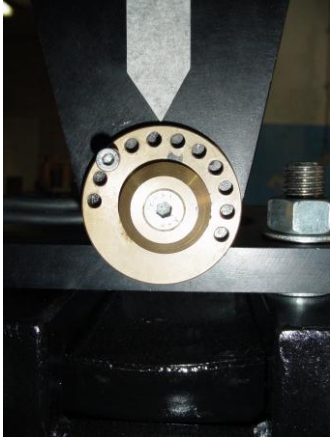

Zdjęcie 9